

 
ACHO45, ACHO55, ACHO75, ACHO85 2-WIRE THERMOSTATS

SPECIFICATIONS

Operating Voltage: 18-30 VAC
Maximum Current: 2.0 Amps

NON HEAT PUMP - INSTALLATION INSTRUCTIONS

- 1. Verify power is OFF to heater controls.
- 2. Wire nut one black wire of thermostat to 24 VAC (red) wire.
- Wire nut the second black wire of the thermostat to the cooling device (yellow) wire and the fan (green) wire.
- 4. Verify wiring is correct and then apply power.
- 5. Verify system functions correctly.



HEAT PUMP - INSTALLATION INSTRUCTIONS

- 1. Verify power is OFF to air conditioner controls.
- Wire nut one black wire of thermostat to 24 VAC (Red) wire and the reversing valve (Orange) wire if it is cool active.
- Wire nut the second black wire of the thermostat to the cooling device (Yellow) wire and the fan (Green) wire.
- 4. Verify wiring is correct and then apply power.
- 5. Verify system functions correctly.

