Submittal

Switching Relay 306P






Zonina

Replaces: 10/16

Job _____ Designer ____ Contact ____

The Switching Relay 306P connects up to six thermostats and operates circulators to provide heating to a zoned hydronic heating system. Zone 1 has optional priority over zones 2 through 6 and can be used to provide heat to an indirect domestic hot water tank. The 306P includes optional exercising to prevent circulator seizure when not in use, and optional post purge operation of the last operating zone to maximize energy savings. The 306P provides a RoomResponse™ signal to modulating-condensing boilers to optimize comfort while improving boiler efficiency.

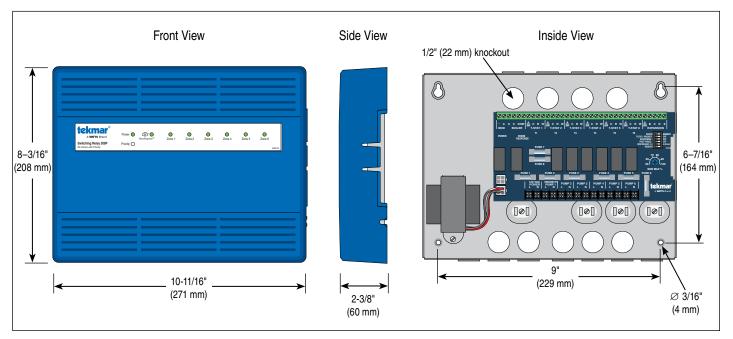

Specifications

Switching Relay 306P Six Zones with Priority	
Literature	306P_C, 306P_D, 306P_J
Control	Microprocessor control. This is not a safety (limit) control.
Packaged weight	5.0 lb. (2250 g)
Dimensions	8-3/16" H x 10-11/16" W x 2-3/8" D (208 x 271 x 60 mm)
Enclosure	Cover: ABS plastic, Base: galvanized steel, NEMA type 1
Approvals	CSA C US
Ambient conditions	Indoor use only, 32 to 122°F (0 to 50°C), RH ≤90% non-condensing
Power supply	115 V (ac) ±10%, 60 Hz, 20 A
Transformer	40 VA, expandable to 80 VA with additional transformer M3069 (sold separately)
Control load	7 VA
Fuses	T5A 250 V slow blow, two spare fuses included
Pump relays	230 V (ac), 5 A, 1/3 hp
Boiler XX end switch	24 V (ac), 5 A
DHW end switch	24 V (ac), 5 A
Mod boiler output	0-10 V (dc) 500 Ω min load impedance 4-20 mA 1k Ω max load impedance
Warranty	Limited 3 Year (See 306P_D for full warranty)

Features

- RoomResponse[™] signal (Patent Pending)
- · Compatible with all low voltage thermostats
- Unlimited zone expansion
- Zone priority
- · Priority override
- Pump exercising
- Post purge
- LED for each zone, priority, end switch and RoomResponse $^{\text{TM}}$
- Away signal shared between tekmar thermostats
- · Four ground screws
- Top, bottom and back conduit knockouts
- Fuses protect transformers and pumps
- Two spare fuses included
- CSA approved



Sample Application Drawing

Sample Mechanical diagram

Legend

A1 = DHW Tank Aquastat

B1 = Boiler

BP = Boiler Pump

P1 = Zone 1 DHW Tank Pump

Sample Electrical diagram

P2 to P6 = Zone 2 through 6 Pump

T1 = WiFi Thermostat 561 or 562

T2 = Thermostat 518 or 519


T3 = Thermostat 518 or 519

T4 = Generic Digital Power-Stealing

Thermostat


T5 = Generic Bi-Metallic Strip Thermostat



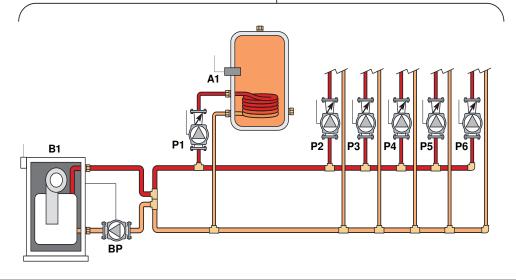

T5

T2 T3 T4

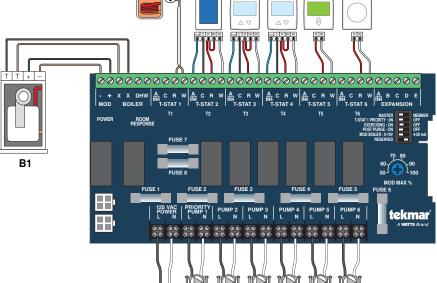

DIP Switches

Master

T-stat 1 Priority = On Exercising = On

Post Purge = On

Mod Boiler = depends on boiler

A CAUTION

This Submittal is not intended to provide full installation instructions and safety information. In order to avoid property damage or injury, please refer to the complete installation manual and product safety information provided with the product.

P3

P5



A WATTS Brand

All specifications are subject to change without notice.

T: (250) 545-7749 • F: (250) 984-0815 tekmarControls.com